



BLACK OUT GRILL - 2010 - CURRENT FORD E-SERIES

WARNING! READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION
CONFIRM MEASUREMENTS BEFORE DRILLING ANY HOLES

PARTS LIST:

FRONT

1 BLACK OUT GRILL (FES-G-BLK)

TOOLS NEEDED:

FLATHEAD SCREWDRIVER
10MM SOCKET/WRENCH
DRILL
5/16 DRILL BIT

INSTALLATION INSTRUCTIONS

DISASSEMBLY**STEP 1:**

Park vehicle on flat ground

Prop open the hood

**STEP 2:**

On the top portion of the grill there are 3 fasteners holding the grill to the core support (2 plastic and one 10mm bolt)

Using a flat head screwdriver, pry locking plastic retainers up and remove

Using a 10mm socket and wrench, remove the last middle fastener

**STEP 3:**

Pull the grill toward you exposing the lower 3 tabs at the bottom of the grill

Using your flathead screwdriver pry tabs to break the grill loose from the vehicle

Remove the grill



INSTALLATION

STEP 4:

Place stock grill on workbench or flat area to remove the Ford emblem badge


Remove the 10mm bolt on the backside of the Ford badge

Using your flathead screwdriver pry the two tabs holding the emblem in place and remove



STEP 5:

Before placing Ford badge on your new blackout grill, drill out a hole to accommodate the new Ford emblem using a 5/16 drill bit

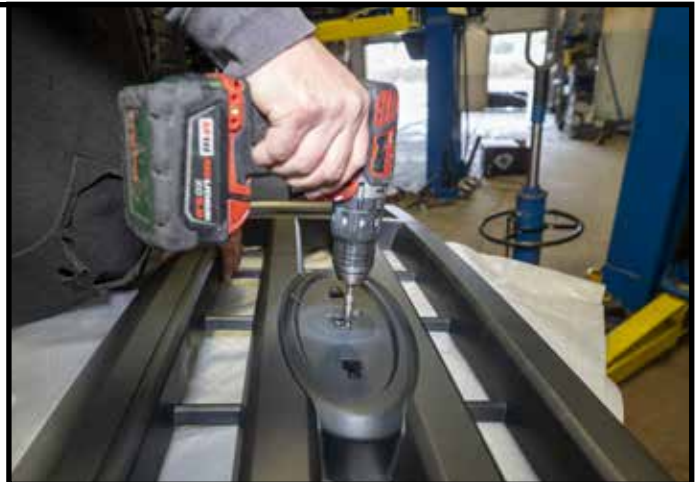

STEP 6:

Install the Ford badge and tighten the 10mm bolt

***Note: Do not over tighten**



INSTALLATION**STEP 7:**

Press the new grill in place till you hear the lower clips engage

Line up the top holes and re-install plastic retainers and 10mm fastener

**STEP 8:**

Install is complete

